



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	CHAIN, PRIMARY (50L) 13610-393-004	001
02	SHAFT ASSY., PRIMARY 13640-393-010	001
02	SHAFT ASSY., PRIMARY 13640-393-020	001
03	SUB-GEAR (37T) 13642-393-300	001
04	SPRING, PRIMARY GEAR 13644-393-015	001
04	SPRING, PRIMARY GEAR 13644-393-025	001
05	COLR, PRIMARY SHAFT 13645-393-300	001
05	COLR, PRIMARY SHAFT 13645-393-310	001
06	GEAR (17T) 15211-393-000	001
07	ORIFICE, OIL CONTROL 15325-393-000	001
08	NOZZLE 15711-393-000	001
09	GUIDE, PRIMARY CHAIN 23132-393-000	002
10	SET-RING (56MM) 90601-393-000	001
11	BEARING (63/22) 91007-438-003	001
12	SEAL, CAP (56X10) 91209-393-003	001
13	O-RING (7.7X2.3) 91301-PC9-003	001
13	O-RING (7.7X2.3) 91301-PC9-003	001
13	O-RING (7.7X2.3) 91301-PC9-003	001

14	CIRCLIP (15MM) 94510-15000	001
15	CIRCLIP (22MM) 94510-22000	001
16	BOLT, FLANGE (6X12) 95701-06012-00	004
16	BOLT, FLANGE (6X12) 95701-06012-00	004
17	BOLT, FLANGE (6X28) 95700-06028-00	001
17	BOLT, FLANGE (6X28) 95701-06028-00	001
18	BEARING (6204) 96100-62040-00	001
18	BEARING (6204) 96100-62040-00	001

[www.hondachopper.com](http://www.hondachopper.com)